

Our quick and easy guide to...

## Portable Digital TV

by Alexandra from Customer Services



### Turning It On

I'd recommend letting the TV charge directly through the mains, or by hooking it up to your computer via USB for around 3 hours just to make sure it's fully charged for all your TV viewing goodness.

Once you've charged the TV, just flick and hold the sliding switch on the top right hand corner of the TV to turn it on.

### Digital TV

Make sure the silver aerial on the top left side of the TV is fully extended!

When the TV turns on you'll come to a blue screen with a picture of a TV on the left hand side, and a menu on the right hand side. You can navigate through this menu using the channel controls (the first up and down buttons on the right hand side of the screen). To access your Digital TV select 'DVB-T' and press 'OK'.

From here you'll need to make the TV scan for any Freeview channels you can receive - this can vary depending on the strength of the Freeview signal in your area. The number of channels you're able to pick up also depends on your surroundings (large office blocks and the like can have a negative impact on signal quality).

To scan for channels click 'OK' again, and using the channel controls select the second option down - 'Fullscan'. Click OK once more. You'll now have a blue box in the middle of the screen telling you it's scanning for channels, and the number of channels it has found. This may take a couple of minutes, so now is the perfect time to go and pop the kettle on.

Once the TV has finished scanning you're all good to go. You can have a flick through the channels using the channel control, or you can access the full channel list by clicking 'OK' and selecting 'Ch List' from the menu (just scroll using the channel controls and select the channel you'd like to watch by clicking 'OK').

### Radio

Important tip - the earplugs provided with the TV act as an additional aerial for the radio, so you need to have these plugged in to be able to use it.

Setting up your radio is pretty similar to setting up the TV. Select 'Radio' from the main menu. To scan for channels hit 'OK' and select the second option 'Scan' - give it a second and it'll find you all the radio stations you have within range. The Radio may already be set to 'Manual', meaning you'll have to manually scroll through the frequencies to find a station. To change this hit 'OK' and 'Manual' and it'll switch to 'Auto' - this way, with one click of a button the tuner will find you the next available station.

### Video, Music, Pictures

Got Mp3, .avi and .jpg files? Transferring them to your Portable Digital TV is as easy as dragging and dropping! First of all, connect the TV to your PC using the supplied USB cable. Go to the 'Start' menu, on your PC, select 'My Computer' and double click the Portable TV under 'Devices with Removable Storage'. You should have three menus - 'Music', 'Video' and 'Pictures'. Find the files you'd like to transfer and go ahead and drop them in to the appropriate folder.

Finding them on the TV is pretty simple too. The same method applies as before - select what you'd like to watch or listen to from the menu and click 'OK'. From there click 'OK' again and scroll down to the file list, and select 'Internal Memory' - here you'll see everything you've managed to transfer over!

### External Memory

Does your digital camera have a removable Mini SD card? Slot it in the Digital TV by opening the hatch on the bottom. Go to 'Pictures', click 'OK' and select 'External Memory' - here you'll see all your piccies in all their glory.

### Additional Tips

The TV will not play video files that aren't .avi format. To get round this problem, install the PC software that comes with the TV and use it to convert your videos to .avi files.

If everything goes a little bit wrong and your TV freezes there is a reset button on the bottom accessible with a pin.

The button with the picture of the lock on it? Yeah. That locks the screen.

Charging - when it's low on battery, the light over the volume buttons will be red. When it is fully charged it'll be green. The TV will also give you a warning onscreen if you're too low on battery.

**Anything we've missed? Give us a call on 0844 922 1010 and we'll investigate further!**

